

COOLAROO CRANK OPERATED EXTERIOR BLINDS

CHANGING CRANK FROM RIGHT HAND TO LEFT HAND

STEP 1:

The crank operated mechanism is factory set for right hand operation.

Unscrew the four screws and remove housing unit.

STEP 3:

Turn the turbine component upside down and place back in it's position.

STEP 5:

Position the housing unit back on and screw it tightly back into place. If you have difficulty turn the crank handle as this will help engage the turbine unit.

STEP 7:

The blind is fitted with an idle end and crank end component positioned in each end of the aluminium tube.

Remove each end component with pliers and swap from left to right

Your blind is now fully functional for left hand operation

STEP 2:

The inside of the crank has two components.

Take out the turbine component (circled)

STEP 4:

The turbine component should now be appear as shown.

STEP 6:

Your crank mechanism is now set for left hand operation.

Idle End



Crank End

