



EASY RELEASE

Outdoor Blind

Sunshade PVC Mesh & Pelmet



3-Year Fabric
Warranty against
UV degradation



2-Year Parts
Warranty

Up to
90%
UV Block

NATURAL

490812 - 1.2 m x 2.4 m
490836 - 1.5 m x 2.4 m
490850 - 1.8 m x 2.4 m
490874 - 2.1 m x 2.4 m
490898 - 2.4 m x 2.4 m

GUN METAL

490805 - 1.2 m x 2.4 m
490829 - 1.5 m x 2.4 m
490843 - 1.8 m x 2.4 m
490867 - 2.1 m x 2.4 m
490881 - 2.4 m x 2.4 m



Retract your exterior blind when not in use, or before strong storms, to prevent damage.

WARNING

When assembling and using this product, safety precautions should always be followed to reduce the risk of personal injury and damage to equipment.

Please read all instructions before assembly and use.

Two or more people are recommended for safe assembly.

Keep all children and pets away from assembly area.

Check all screws for tightness before use.

Retract your exterior blind when not in use, or before strong storms, to prevent damage.

Do not place the product near an open flame or too close to any heat source such as heaters or BBQs.

The diagrams in this manual are for illustration purposes only, to assist with assembly and operation. They may differ from the outdoor blinds actual appearance.

CARE AND MAINTENANCE

Your exterior blind has been made of the finest materials and, when properly cared for, will provide years of shade, privacy and protection from the elements.

To clean your shade, simply rinse with water, scrub with mild soap or any non abrasive cleaner, rinse and allow to dry.

Do not store shade wet. In damp environments roll blind down frequently to air dry. Retract your exterior blind when not in use, or before strong storms, to prevent damage.

CAUTION

Use of solvents or abrasive cleaners may damage the fabric and will void your warranty. Do not bleach or use chlorine.

Sizes

<p>120 cm WIDTH</p> <p>240 cm DROP</p> <p>Overall width 122cm</p> <p>Natural - 490812 Gun Metal - 490805</p>	<p>150 cm WIDTH</p> <p>240 cm DROP</p> <p>Overall width 152cm</p> <p>Natural - 490836 Gun Metal - 490829</p>	<p>180 cm WIDTH</p> <p>240 cm DROP</p> <p>Overall width 183cm</p> <p>Natural - 490850 Gun Metal - 490843</p>	<p>210 cm WIDTH</p> <p>240 cm DROP</p> <p>Overall width 213cm</p> <p>Natural - 490874 Gun Metal - 490867</p>	<p>240 cm WIDTH</p> <p>240 cm DROP</p> <p>Overall width 244cm</p> <p>Natural - 490898 Gun Metal - 490881</p>
--	--	--	--	--

What's in the box

Installing your new Coolaroo Outdoor Blind is easy, simply follow our step-by-step instructions.

PARTS LIST	QTY
a Aluminium pelmet	1
b Blind	1
c Bottom rail caps	2
d Bottom rail	1
e Bungees	2
f Receivers	2
g Timber screws	10
h Quick mount brackets	3
i Wall plugs	10
j Telescopic wand	1


TOOLS REQUIRED

Power Drill with 5mm masonry bit
Tape measure
Phillips head screwdriver
Pencil
Spirit level




INSIDE OR OUTSIDE MOUNT

This blind can be fitted to the top (inside) or face (outside) of your wall, depending on your installation environment.

Top (inside) mount

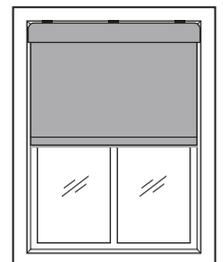

Face (outside) mount

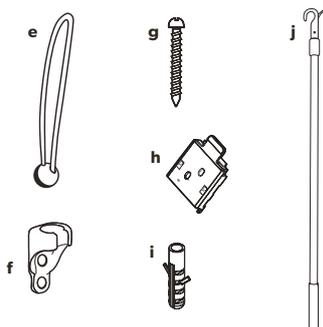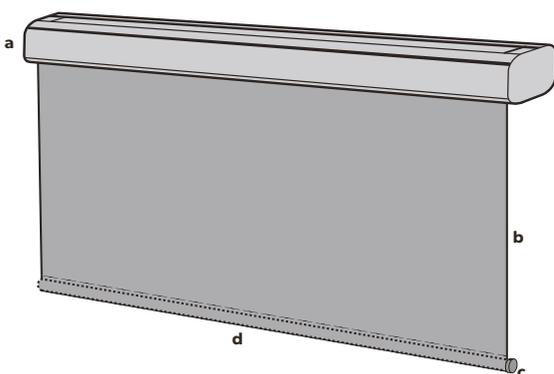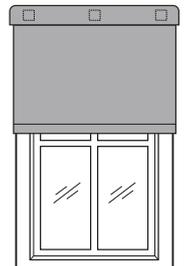

Installation



1 INSTALLING THE BRACKETS

- A. Space the three quick mount brackets evenly along the length of your blind. Mark the left, right and centre bracket positions on your installation surface.

NOTE: For top mount installation the bracket tabs should face forwards. For face mount installations the bracket tab should face downwards. Allow at least 5cm (2") of clearance between the bracket and the wall or ceiling to allow enough clearance for fitting and removing the pelmet.

- B. In the marked positions attach the three quick mount brackets using the timber screws. Ensure the screws are penetrating into timber. If mounting to masonry, use the 5mm wall plugs.


IMPORTANT: If the brackets are installed upside down or backwards, the pelmet will not lock into the brackets.

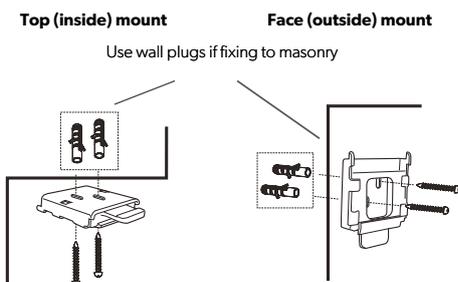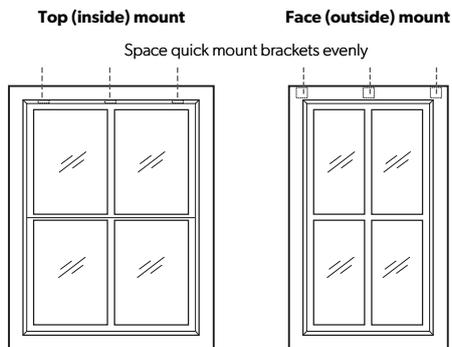

2 INSTALLING THE BLIND

- A. Fit the pelmet by first locating the hooks on the bracket into the channel on the pelmet. Then push the pelmet firmly onto the brackets until all three latches snap securely into the channel.


NOTE: Use the channels on top of the pelmet for top (inside) mount installations and the channels on the side of the pelmet for face (outside) mount installations.

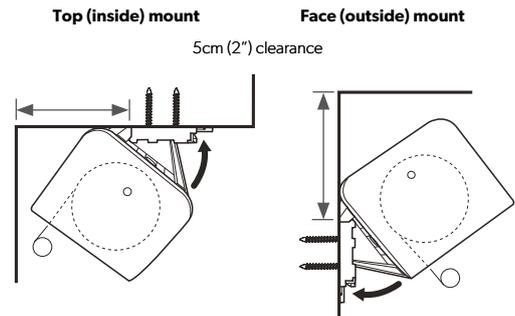

3 INSTALLING BUNGEE TIE DOWNS (optional)

Bungee tie downs have been provided to secure your blind in mild to moderate wind conditions.

- A. Thread the bungee through the end cap and back through itself making a lark's head knot (Fig. A).
- B. Use the timber screws to install the receiver approximately 13cm (5") below where the blind will stop. Fit a receiver on each side of the blind (Fig. B). Use the 5mm wall plugs if screwing into masonry.
- C. Attach the bungee to the receiver to secure the blind when in the down position.

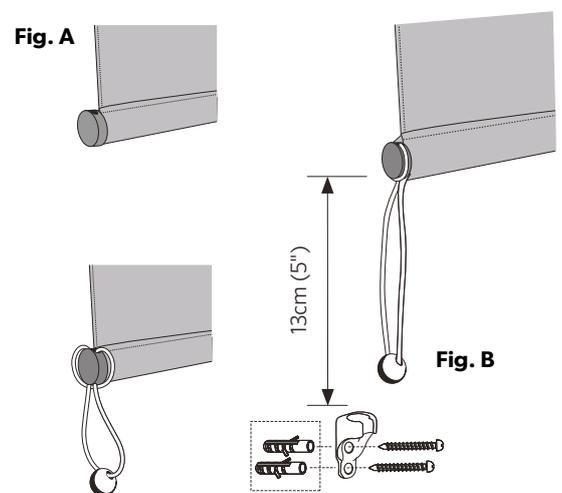


Operation

RAISING AND LOWERING THE BLIND

To lower the blind, hold the centre of the bottom rail and pull it down to the desired height.

To raise the blind pull the blind down slightly then release it, allowing it to retract into the pelmet.

NOTE: Use the telescopic wand if the blind cannot be reached by hand. Extend the wand to its full length, then locate the hook into either end cap and use it to lower the blind.

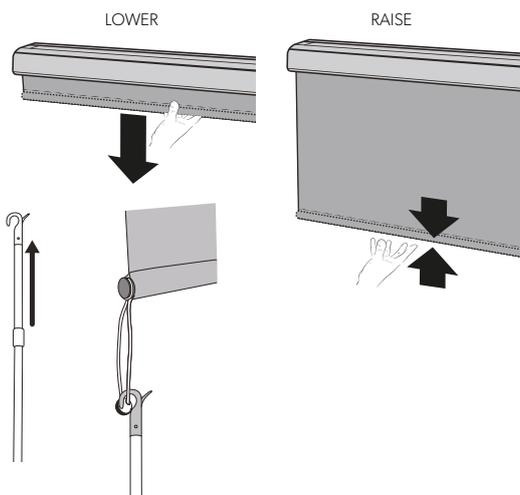


ADJUSTING THE SPEED (TENSION)

To adjust the retraction speed of the blind, follow these steps.

Increase the speed of the blind by turning the spring adjuster counter-clockwise 1 - 2 rotations, using a screwdriver until you are satisfied with the speed.

Decrease the speed of the blind by turning the spring adjuster clockwise 1 - 2 rotations.

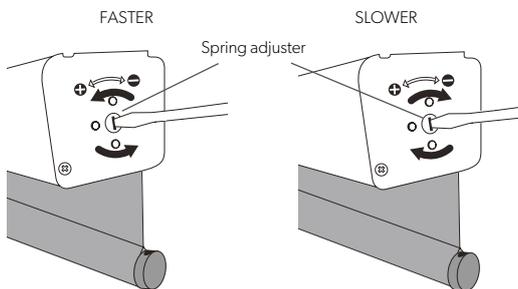


ADJUSTING THE TOP POSITION

To adjust the stop position of your blind when retracted, follow these steps.

Lower the top position by turning the stop adjuster counter-clockwise, using a screwdriver until you are satisfied with the blind position.

Raise the top position by turning the stop adjuster clockwise until satisfied with the position.

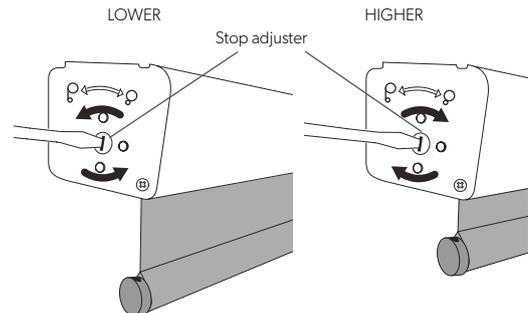

Warranty

3 YEAR FABRIC AND 2 YEAR PARTS WARRANTY AND LIMITATION OF LIABILITY

To register your product for warranty, go to coolaroo.com

Coolaroo products are manufactured by Gale Pacific Limited ACN 082 263 778 (Gale). Gale provides the following warranty in relation to Coolaroo products ("Product").

The benefits of this warranty are in addition to any rights and remedies imposed by Australian Consumer Law, NZ Consumer Guarantees Act 1993, and state and federal legislation that cannot be excluded. Nothing in this warranty is to be interpreted as excluding, restricting or modifying any applicable legislation to the supply of goods and services which cannot be excluded, restricted or modified.

WARRANTY

Gale warrants that, subject to the exclusions and limitations below, all parts of the manufacture and assembly of the Product will be free from defects in materials and workmanship for a period of three (3) years fabric and two (2) years parts.

If a defect appears in the Product before the end of the warranty period and Gale finds the Product to be defective in materials or workmanship, Gale will, in its sole discretion, either:

- a) replace or repair the Product or the defective part of the Product free of charge; or
- b) refund the purchase price of the Product.

Gale reserves the right to replace defective parts of the Product with parts and components of similar quality, grade and composition where an identical part or component is not available.

The warranty will not apply where:

- a) the Product has been altered or modified by someone other than Gale or its authorised agent;
- b) the alleged defect in the Product is within acceptable industry variances;
- c) Gale cannot establish any fault in the Product;
- d) the defect in the Product has arisen due to the customer's failure to install and use the Product in accordance with the instructions provided;
- e) the defect in the Product has arisen due to the customer's request to customise the Product;
- f) the Product has been subject to abnormal conditions, including environment, temperature, water, fire, humidity pressure, stress or similar.

The warranty does not extend to:

- a) damage or defects caused by normal wear and tear,
- b) water or sun damage; or
- c) any other damage caused by the customer placing other equipment, furniture or material in close proximity to the Product. Gale makes no express warranties or representations other than set out in this warranty.

The repair or replacement of the Product or part of the Product is the absolute limit of Gale's liability under this express warranty.

WARRANTY CLAIMS

- 1) Upon purchasing the Product, the customer must register their warranty by completing the Coolaroo online warranty registration at www.coolaroo.com. Alternatively, the customer can contact Coolaroo Customer Service on 1800 331 521 (AU) or 0800 555 171 (NZ) for assistance.
- 2) If a fault covered by warranty occurs, the customer must contact Gale using the contact details provided.
- 3) Any warranty claim must be accompanied by proof of purchase and details of the alleged defect.
- 4) The customer must bear the cost of the transport of the Product to and from Gale or the authorised agent to make the warranty claim, and all insurance of the Product.

AUSTRALIAN CONSUMER LAW

Nothing in this agreement is intended to have the effect of contracting out of any applicable provisions of the Competition and Consumer Act 2010 or the Fair Trading Acts in each of the States and Territories of Australia, except to the extent permitted by those Acts where applicable.

This warranty is not transferable, and applies only to the initial purchaser of the installed Product.

In addition to the above warranty, Australian Consumer law and other state and territory legislation may imply warranties or conditions or impose liability on Gale in relation to the Product or its supply which cannot, or can only to a limited extent, be excluded, restricted or modified. Except for those implied warranties or conditions and such liability, and for the warranty described above:

a) all warranties and conditions (whether express or implied, statutory or otherwise) relating to the Product or its supply are expressly excluded; and

b) Gale will not be liable for any loss or damage suffered by any person (including the purchaser of the Product) in any way relating to or arising from the Product or its use (including loss or damage arising from the negligence of, or contributed to by, Gale).

If liability for breach by Gale of a warranty or condition or any other liability imposed on Gale by legislation which cannot be excluded may be limited, Gale's liability is limited to the extent permitted by law, and if liability may be limited in any one of a number of ways, Gale's liability is limited in any one of the permitted ways chosen by Gale in its absolute discretion.

The Purchaser acknowledges that the Purchaser does not rely on the skill or judgment of Gale as to whether or not the Products are fit for any particular purpose.

The Purchaser indemnifies Gale from every liability, loss, damage, cost or expense directly or indirectly incurred or suffered by Gale caused by or contributed to by the Purchaser's failure to:

- 1) adequately provide or display safety markings or safety information on or with the Products;
- 2) comply with any law about the Products or their use;
- 3) take any reasonable precaution to bring to the attention of any potential users of the Products any dangers associated with Products;
- 4) any negligence or breach of duty by the Purchaser or any breach by the Purchaser of these terms.



Australia Toll Free: 1800 331 521
New Zealand Toll Free: 0800 555 171