 


How to reset your Coolaroo Solar Motorised blind


Follow these instructions to set the up and down limit positions on your solar motorised blind.

1. Press and hold motor program button until the motor rotates back and forth four (4) times and the motor beeps.

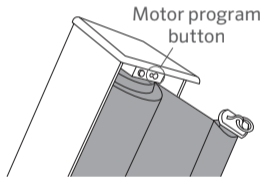


Press the program button again for two (2) seconds. Motor will rotate once and beep.

2. Press remote control program button. Motor will rotate.

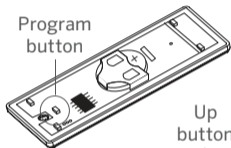

Press remote control program button again.

Press up button.
Motor will beep.

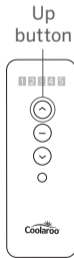


3. Press the remote control program button.
Motor will rotate back and forth once.

Press the up button.
Motor will rotate back and forth once.

Press remote control program button. Motor will rotate back and forth once

4. Move the blind to the desired up limit position. Press and hold the stop button until the motor rotates.

Move the blind to the desired down limit position. Press and hold the stop button until the motor rotates again and beeps.

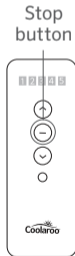

For further advice contact our Customer Service team on 1800 331 521