



EXTERIOR BLIND

SOLAR MOTORISED




ASSEMBLY & OPERATING
INSTRUCTIONS



PARTS LIST

Take all parts out of the box and ensure they are all present.

- a) Aluminium pelmet
- b) Blind
- c) Bottom rail caps
- d) Bottom rail
- e) Bungees (2)
- f) Receivers (2)
- g) Timber screws (12)
- h) Quick mount brackets (3)
- i) Wall plugs (12)
- j) Solar panel
- k) Mounting bracket
- l) Solar panel clip
- m) Screw
- n) Nut
- o) 5 channel remote

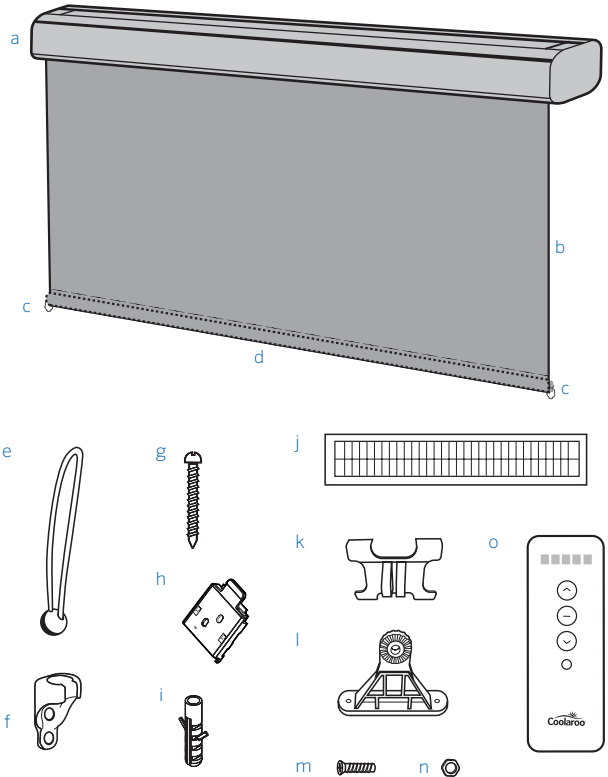


WHAT ELSE YOU'LL NEED

- Drill bit
- Level
- Tape measure
- Pencil
- Phillips-head screwdriver


INSIDE OR OUTSIDE MOUNT

This blind can be fitted to the top (inside) or face (outside) of your wall, depending on your installation environment.

TOP (INSIDE) MOUNT

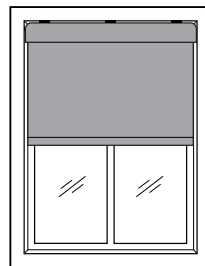

FACE (OUTSIDE) MOUNT

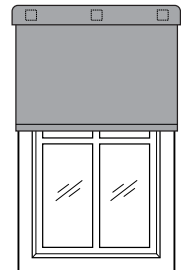

STEP 1

Space the three quick mount brackets evenly along the length of your blind. Mark the left, right and centre bracket positions on your installation surface.


NOTE: For top mount installation the bracket tabs should face forwards. For face mount installations the bracket tab should face downwards. Allow at least 5cm (2") of clearance between the bracket and the wall or ceiling to allow enough clearance for fitting and removing the pelmet.

In the marked positions attach the three quick mount brackets using the timber screws. Ensure the screws are penetrating into timber. If mounting to masonry, use the 5mm wall plugs.


IMPORTANT: If the brackets are installed upside down or backwards, the pelmet will not lock into the brackets.

TOP (INSIDE) MOUNT FACE (OUTSIDE) MOUNT

Space quick mount brackets evenly

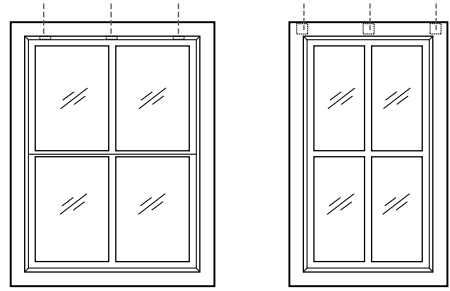

TOP (INSIDE) MOUNT FACE (OUTSIDE) MOUNT

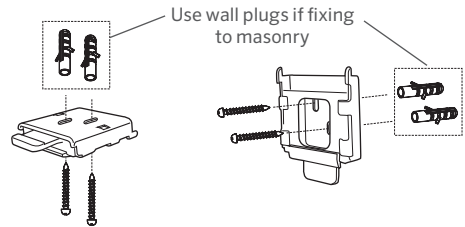


STEP 2

Fit the pelmet by first inserting the bracket hooks into the channel on the pelmet. Then push the pelmet firmly onto the brackets until all three latches snap securely into the channel.

NOTE: Use the channels on top of the pelmet for top (inside) mount installations and the channels on the side of the pelmet for face (outside) mount installations.

TOP (INSIDE) MOUNT FACE (OUTSIDE) MOUNT

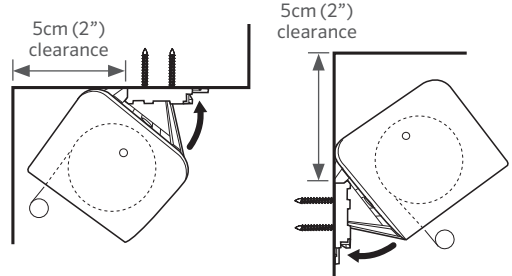


STEP 3

Bungee tie downs have been provided to secure your exterior blind down in mild to moderate wind conditions.

Thread the bungee cord through the end cap ring and back through itself, making a lark's head knot.

Use the timber screws to install the receiver approximately 13cm (5") below where the blind will stop. Fit a receiver on each side of the blind. Use the 5mm wall plugs if screwing into masonry.

Attach the bungee to the receiver to secure the blind when in the down position.

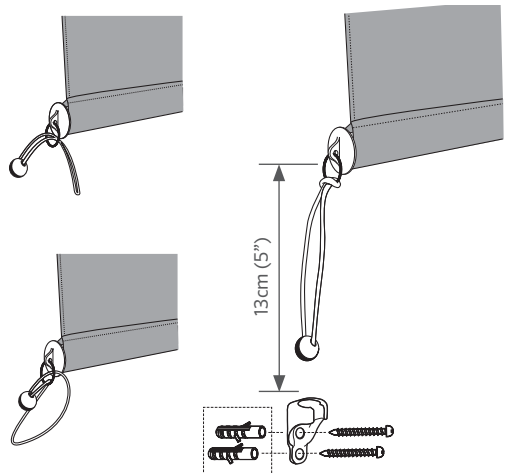

STEP 4

Position the solar panel clip onto the mounting bracket and secure into position using the screw and nut. Do not yet tighten.


Use the timber screws to mount the solar bracket into a position near the pelmet that attracts the most amount of sunlight. If mounting to masonry, use the 5mm wall plugs.

Fit the solar panel into the clip, making sure the power cord is on the right hand side.

NOTE: Ensure the solar panel mounting location is close enough to allow the 2m cable to reach the connection point on the motor.


Run the power cord along the top of the pelmet and connect it to the motor.

Tilt the solar panel to an angle that will receive the most sunlight, then fully tighten the screw.

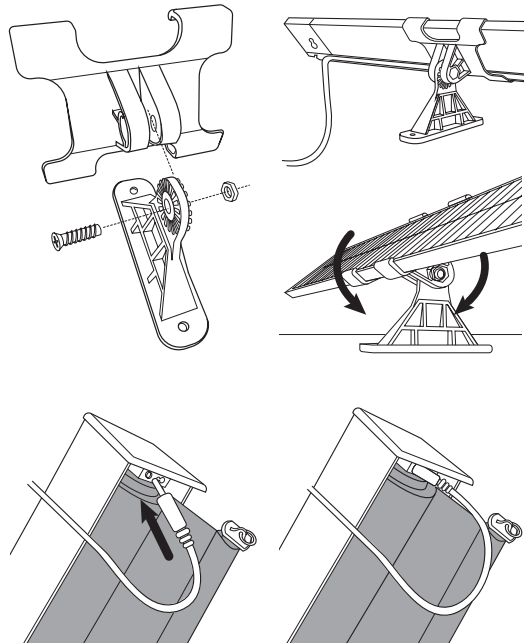

STEP 5

To power up your solar motorised blind for the first time press the motor program button once on the right hand side of the blind. The blind will move to the bottom position. Once it has stopped, it is ready for use.

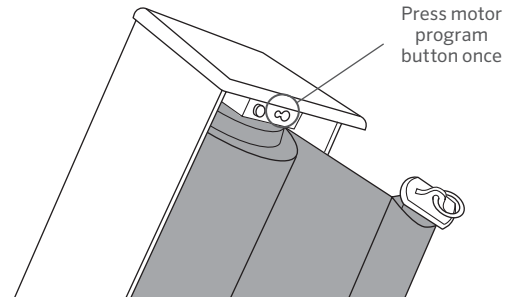


PROGRAMMING THE REMOTE CONTROL

To program the remote control you will need to access the program button which is located on the inside of the remote control.

Using a Phillips-head screwdriver undo the screw on the back of the remote control and remove the casing. Take note of the program button.

NOTE: The remote control is fitted with a battery isolation tag that will need to be removed and disposed of prior to operating the remote control.

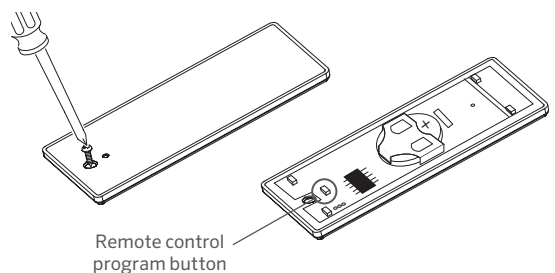


Pairing the remote control for up to 5 blinds

The blind has been pre-programmed to Channel 1 on the remote control (as illuminated on the channel indicator). Up to 4 additional blinds can be programmed to the same remote control by following these steps.


NOTE: You have 10 seconds to pair each blind before the remote control resets and you will need to start the sequence again.

1. Hold motor program button for 3 seconds.

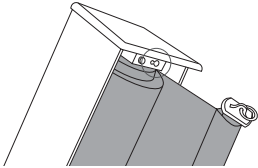

Motor will beep once and rotate (back and forth).


2. Press channel selector button to choose the desired channel for pairing.

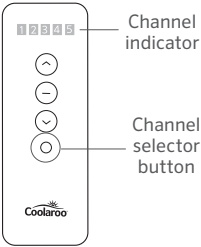

Channel indicator


Channel selector button

3. Press the remote control program button once. Motor will beep once and rotate (back and forth). When the motor stops press it again.

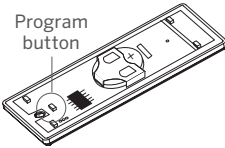

Program button

4. Press the up button once.

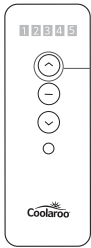

Up button

Motor will reverse and beep six times to complete the pairing.

Repeat the above steps to pair additional blinds to the remote control.


Once all blinds have been programmed to the remote they can be operated independently or all at the same time. Press the channel selector button to choose a single blind (1 to 5), or, when all 5 channels are illuminated all blinds will operate together.

Setting an additional stop position

The blind has been pre-programmed with top and bottom limit positions.

To set an additional stop position, follow these steps.

1. Select the desired additional blind position using the up, down and stop buttons on the remote control.

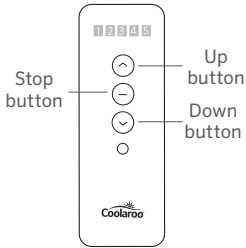


Stop button

Up button

Down button


2. When the blind is in the desired position, press the program button on the back of the remote.

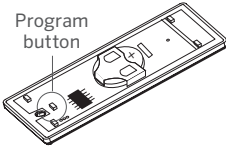

Program button

Motor will beep once and rotate (back and forth).


3. Press the stop button once.

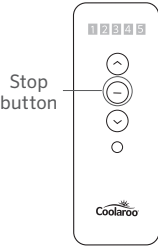

Stop button

Motor will beep once and rotate (back and forth).

4. Press the stop button one last time.

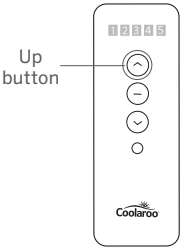


Up button

Motor will beep 3 times, signaling that the additional position is set.

Canceling the additional stop position


Follow these steps to cancel the additional stop position.

1. Press the program button on the back of the remote.

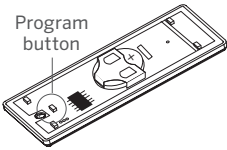


Motor will beep once and rotate (back and forth).

2. Press the stop button once.

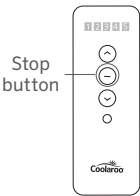

Motor will beep once and rotate (back and forth).


3. Press the stop button one last time.

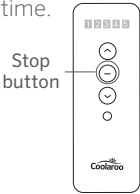

Motor will beep 3 times, signaling that the middle position has been cleared.

Resetting the remote control

To restore the remote control back to the factory setting, press and hold the program button on the motor for 10 seconds.

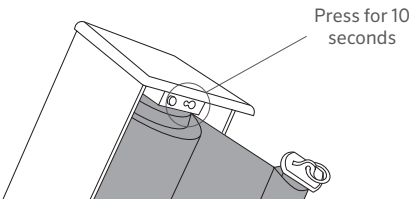


REPLACING THE BATTERY IN THE REMOTE CONTROL

The battery should be replaced when the responsiveness of the remote reduces. The remote uses a CR2032 button battery.

Remove the back of the remote using a Phillips-head screwdriver.

Carefully slide the battery from its compartment.

With the positive (+) side facing up, slide the new battery into the compartment and re-assemble the remote control.

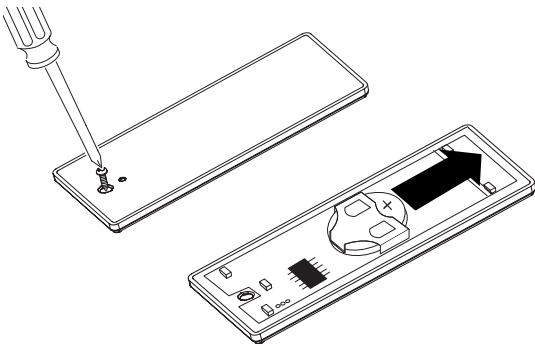

NOTE: Batteries are not covered by the warranty.

⚠ WARNING : KEEP BATTERIES AWAY FROM CHILDREN



Swallowing batteries may lead to serious injury in as little as two hours or death, due to the chemical burns and potential perforation of the oesophagus.

If you suspect your child has swallowed or inserted a button battery immediately call the 24 hour Poisons Information Centre on 13 11 26 for fast, expert advice.

Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened.

Do not use if compartment is not secure.

Dispose of used button batteries immediately and safely. Flat batteries can still be dangerous.

All consumers are required by law to dispose of batteries properly at the designated collection points.

Tell others about the risk associated with button batteries and how to keep their children safe.

Do not short circuit batteries or take them apart.

Never expose batteries to excessive heat such as sunshine or fire.

PRODUCT 2 YEAR WARRANTY AND LIMITATION OF LIABILITY

Coolaroo products are manufactured by Gale Pacific Limited ACN 082 263 778 (Gale). Gale provides the following warranty in relation to Coolaroo products ("Product").

The benefits of this warranty are in addition to any rights and remedies imposed by Australian Consumer Law, NZ Consumer Guarantees Act 1993, and state and federal legislation that cannot be excluded. Nothing in this warranty is to be interpreted as excluding, restricting or modifying any applicable legislation to the supply of goods and services which cannot be excluded, restricted or modified.

WARRANTY

Gale warrants that, subject to the exclusions and limitations below, all parts of the manufacture and assembly of the Product will be free from defects in materials and workmanship for a period of two (2) years from date of purchase.

If a defect appears in the Product before the end of the warranty period and Gale finds the Product to be defective in materials or workmanship, Gale will, in its sole discretion, either:

- a) replace or repair the Product or the defective part of the Product free of charge; or
- b) refund the purchase price of the Product.

Gale reserves the right to replace defective parts of the Product with parts and components of similar quality, grade and composition where an identical part or component is not available.

The warranty will not apply where:

- a) the Product has been altered or modified by someone other than Gale or its authorised agent;
- b) the alleged defect in the Product is within acceptable industry variances;
- c) Gale cannot establish any fault in the Product;
- d) the defect in the Product has arisen due to the customer's failure to install and use the Product in accordance with the instructions provided;
- e) the defect in the Product has arisen due to the customer's request to customise the Product;
- f) the Product has been subject to abnormal conditions, including environment, temperature, water, fire, humidity pressure, stress or similar.

The warranty does not extend to:

- a) damage or defects caused by normal wear and tear,
- b) water or sun damage; or
- c) any other damage caused by the customer placing other equipment, furniture or material in close proximity to the Product. Gale makes no express warranties or representations other than set out in this warranty.

The repair or replacement of the Product or part of the Product is the absolute limit of Gale's liability under this express warranty.

WARRANTY CLAIMS

- 1) Upon purchasing the Product, the customer must register their warranty by completing the Coolaroo online warranty registration at www.coolaroo.com. Alternatively, the customer can contact Coolaroo Customer Service on 1800 331 521 (AU) or 0800 555 171 (NZ) for assistance.

- 2) If a fault covered by warranty occurs, the customer must contact Gale using the contact details provided.
- 3) Any warranty claim must be accompanied by proof of purchase and details of the alleged defect.
- 4) The customer must bear the cost of the transport of the Product to and from Gale or the authorised agent to make the warranty claim, and all insurance of the Product.

AUSTRALIAN CONSUMER LAW

Nothing in this agreement is intended to have the effect of contracting out of any applicable provisions of the Competition and Consumer Act 2010 or the Fair Trading Acts in each of the States and Territories of Australia, except to the extent permitted by those Acts where applicable.

This warranty is not transferable, and applies only to the initial purchaser of the installed Product.

In addition to the above warranty, Australian Consumer law and other state and territory legislation may imply warranties or conditions or impose liability on Gale in relation to the Product or its supply which cannot, or can only to a limited extent, be excluded, restricted or modified. Except for those implied warranties or conditions and such liability, and for the warranty described above:

- a) all warranties and conditions (whether express or implied, statutory or otherwise) relating to the Product or its supply are expressly excluded; and
- b) Gale will not be liable for any loss or damage suffered by any person (including the purchaser of the Product) in any way relating to or arising from the Product or its use (including loss or damage arising from the negligence of, or contributed to by, Gale).

If liability for breach by Gale of a warranty or condition or any other liability imposed on Gale by legislation which cannot be excluded may be limited, Gale's liability is limited to the extent permitted by law, and if liability may be limited in any one of a number of ways, Gale's liability is limited in any one of the permitted ways chosen by Gale in its absolute discretion.

The Purchaser acknowledges that the Purchaser does not rely on the skill or judgment of Gale as to whether or not the Products are fit for any particular purpose.

The Purchaser indemnifies Gale from every liability, loss, damage, cost or expense directly or indirectly incurred or suffered by Gale caused by or contributed to by the

Purchaser's failure to:

- 1) adequately provide or display safety markings or safety information on or with the Products;
- 2) comply with any law about the Products or their use;
- 3) take any reasonable precaution to bring to the attention of any potential users of the Products any dangers associated with Products;
- 4) any negligence or breach of duty by the Purchaser or any breach by the Purchaser of these terms.

To register your product for warranty go to coolaroo.com.au



SPECIFICATIONS

MOTOR	Battery	2000mAh	Lithium battery
	Using Environment		-0° C+50°C
	Voltage		8.4V
	Normal Torque		0.7Nm
SOLAR PANEL	Noise Level		<60dB
	Solar Panel		-10°C+55°C
	Operating Frequency		433.925MHz
	Channels		5
REMOTE	Remote Battery		CR2032

CARE & MAINTENANCE

Your exterior blind has been made of the finest materials and, when properly cared for, will provide years of shade, privacy and protection from the elements. To clean your shade, simply rinse with water, scrub with mild soap or any non abrasive cleaner, rinse and allow to dry.

Do not store shade wet. In damp environments roll blind down frequently to air dry.

Retract your exterior blind when not in use, or before strong storms, to prevent damage.

Use of solvents or abrasive cleaners may damage the fabric and will void your warranty.

Do not use bleach or chlorine.

For help with product assembly or for any other questions you may have, contact our Customer Service Department.

Australia Toll Free: 1800 331 521
New Zealand Toll Free: 0800 555 171
United States Ph: +1 407 772 7900
Middle East Ph: +971 4 881 7114
China Ph: +86 574 5626 8888



Gale Pacific Limited
145 Woodlands Drive,
Braeside, Victoria, 3195 Australia
Coolaroo is a registered trademark
of Gale Pacific Limited



430559 / 1505